

EAP-SIM

 
Manual Configuration Guide

for Android 4.x




1 Connect to Wireless@SGx via EAP-SIM

a) Select Wi-Fi from settings menu

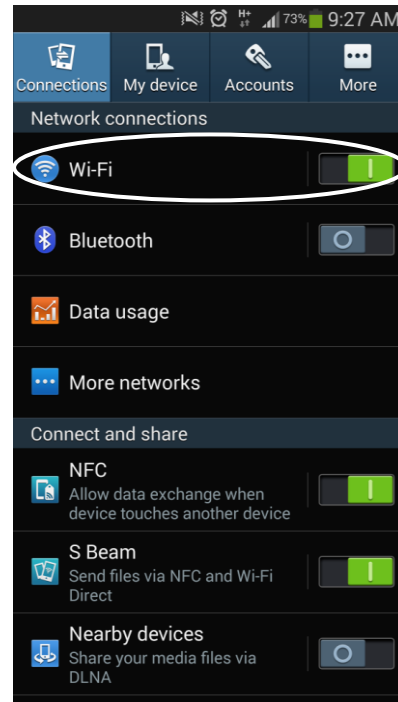

 b) Press and hold the "Wireless@SGx" SSID, then select "Modify network config".

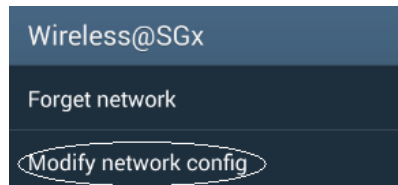


Or select Connect to network for first time user



c) Select SIM from EAP method drop down menu and click save.

 - **EAP Method: SIM**

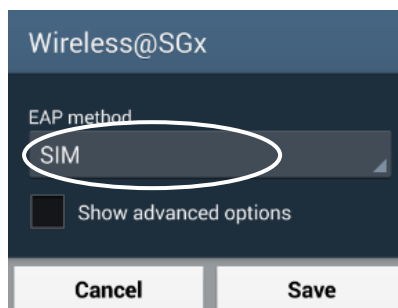

2 Uninstall EAP-SIM profile

Follow the steps below to remove the configuration:

- a) Press **HOME** → **MENU** → **Setting** → **Wi-Fi**
- b) Search for **Wireless@SGx** profile in the list of Wi-Fi networks
- c) Press and Hold on the **Wireless@SGx** profile
- d) Confirm the removal of your profile by tapping the **“Forget”** option in the popup window